CHARGING YOUR SCOOTER*

1. TURN OFF YOUR SCOOTER COMPLETELY.
2. REMOVE THE KEY FROM THE IGNITION.
3. CONNECT THE CHARGING CORD TO THE SCOOTER FIRST, THEN TO THE OUTLET IN THE WALL.

*THE SCOOTER YOU RECEIVE MAY BE DIFFERENT THAN THE PICTURE AND MAY OPERATE DIFFERENTLY.

WARNINGS

- IF THE BATTERY GETS DRAINED TOO LOW, THE CHARGER WILL NOT RECOGNIZE THE BATTERIES.
- SAFETY FEATURES WILL NOT LET THE BATTERY OVERCHARGE.

SPECIALTY RENTALS AVAILABLE FOR RENT

LIFT CHAIR

BATH SAFTEY

PORTABLE OXYGEN CONCENTRATOR

STANDARD WHEELCHAIR

JOB WHEELCHAIR

WE DELIVER TO YOUR HOTEL

TEL: 1.800.513.4515
INTL: 1.954.585.0575

TRAVEL IN COMFORT WITH

SPECIAL NEEDS GROUP®

Special Needs at Sea®

MAKE YOUR EXPERIENCE **CONVENIENT, COMFORTABLE** and **FUN!**

MOBILITY SCOOTER

WWW.SPECIALNEEDSGROUP.COM

TEL: **1.800.513.4515** • INTL: **1.954.585.0575**

Delivering an Accessible World ® Since 2007

OPERATING SCOOTER

GETTING STARTED

1 ENSURE THE SCOOTER IS UNPLUGGED. MOUNT THE SCOOTER BY PUSHING THE ARM UPWARD AND SLIDING ONTO THE SEAT.

2 TURN THE KEY TO THE "ON" POSITION. SQUEEZE RIGHT HAND THROTTLE CONTROL TOWARD YOU TO MOVE FORWARD.

3 RELEASE THE THROTTLE CONTROL LEVER AND SCOOTER WILL SLOWLY COME TO A STOP, THE BRAKES WILL AUTOMATICALLY ENGAGE.

4 SQUEEZE LEFT HAND THROTTLE CONTROL TOWARD YOU AND THE SCOOTER WILL GO IN REVERSE.

5 TURN "OFF' SCOOTER AND REMOVE THE KEY FROM THE IGNITION. DISMOUNT SCOOTER BY SWIVELING SEAT.

SCOOTER FUNCTIONS

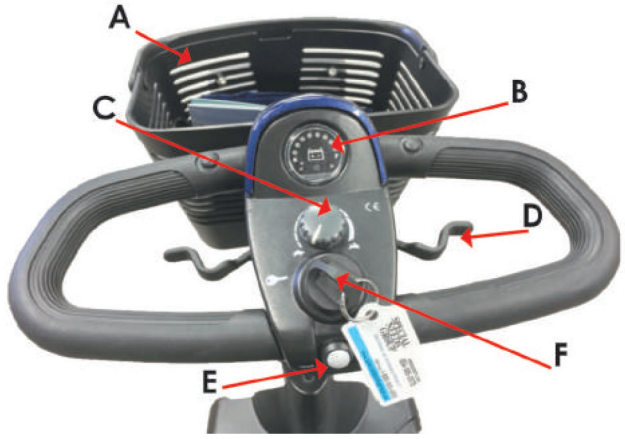

A BASKET

B BATTERY LEVEL INDICATOR GAUGE

C SPEED CONTROL DIAL

D THROTTLE LEVER CONTROL

E HORN BUTTON

F IGNITION SWITCH

QUESTIONS?

GO TO GUEST SERVICES ON-BOARD THE SHIP
AND ASK THEM TO CALL US AT THE NUMBER BELOW:

INTL: 1.954.585.0575
TEL: 1.800.513.4515

WWW.SPECIALNEEDSGROUP.COM
INFO@SPECIALNEEDSGROUP.COM

TROUBLE SHOOTING

1 TURN OFF AND REMOVE THE KEY FROM THE SCOOTER.

2 UNPLUG THE CHARGER FROM THE SCOOTER AND POWER OUTLET.

3 ENSURE THAT THE MANUAL FREEWHEEL LEVER IS IN THE LOCKED POSITION.

IN CASE OF RAIN

- COVER SCOOTER HEAD UNTIL A COVERED AREA CAN BE REACHED.
- SCOOTER MAY NOT FUNCTION PROPERLY IF IT GETS WET.